


# Ortho-Safety-Collar

## Assembly instructions

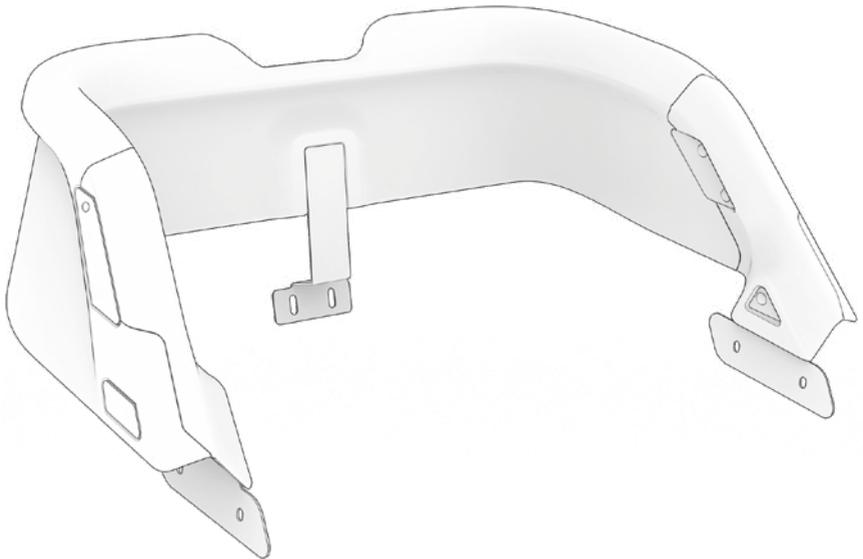

# **Contents**

Safety notices ..... 3  
General information ..... 4  
Intended use ..... 5  
Scope of delivery ..... 6  
Installation ..... 7  
General notes on care ..... 10  
Statutory warranty / guarantee ..... 11

The present assembly instructions is the translation of the original assembly instructions.

## Safety notices

This user manual contains various types of notice.

The notices are designed as follows:



### **Danger**

Potential hazards for your health and the health of your co-riders and other road users if you fail to observe the respective instructions or do not take corresponding precautions.



### **Notice**

Provides information about how to handle the product or refers to a passage in the user manual that deserves special attention.



### **Caution**

Warns you about incorrect behaviour that can result in material and environmental damage.



### **Separate instructions**

Refers you to other assembly instructions for your FS200 Life which describe the respective assembly step in more detail if needed.

## General information

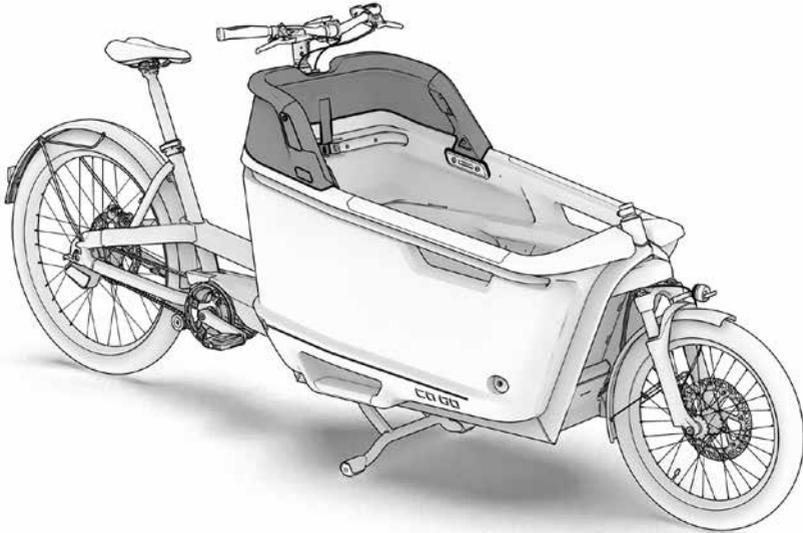


Fig. 1

The Ortho-Safety-Collar is an attachment for the transport box of the FS200 Life. It increases the child's safety during transport and also serves as a convenient headrest, should your child fall asleep during the ride with your Ca Go.



The Ortho-Safety-Collar is the required basis for our All-Weather-Top (Fig. 2).

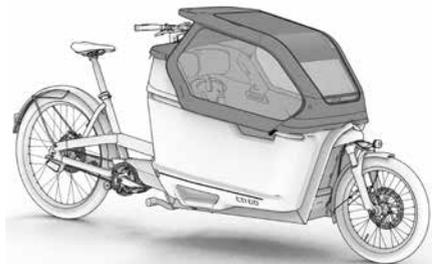


Fig. 2

## Intended use



The Ortho-Safety-Collar is not compatible with the Life Soft Top, nor with the transport box lid.



Even when the Ortho-Safety-Collar is used, all children must be seated in appropriate seats (suitable for their height and weight) and strapped in safely. We strongly recommend using bicycle helmets.



The screw connections should be checked for tight seat at regular intervals and retightened as required. If the Ortho-Safety-Collar shows cracks or signs of deformation after a crash or collision, it must be replaced (safety-relevant component).

## Scope of delivery

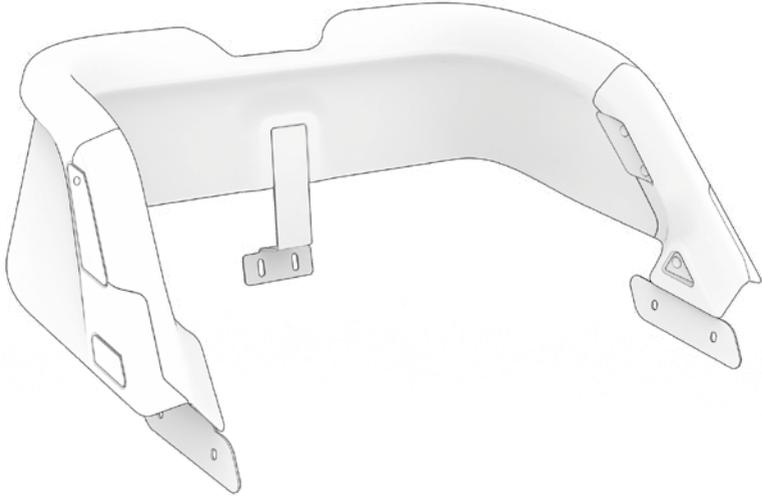


Fig. 3

The Ortho-Safety-Collar consists of several individual parts, EPP, moulded sheet metal components and screw connections. It is delivered pre-assembled (Fig. 3).



Assembly requires the following additional tools:  
Allen key, 5 mm, and Torx® T30

## Installation



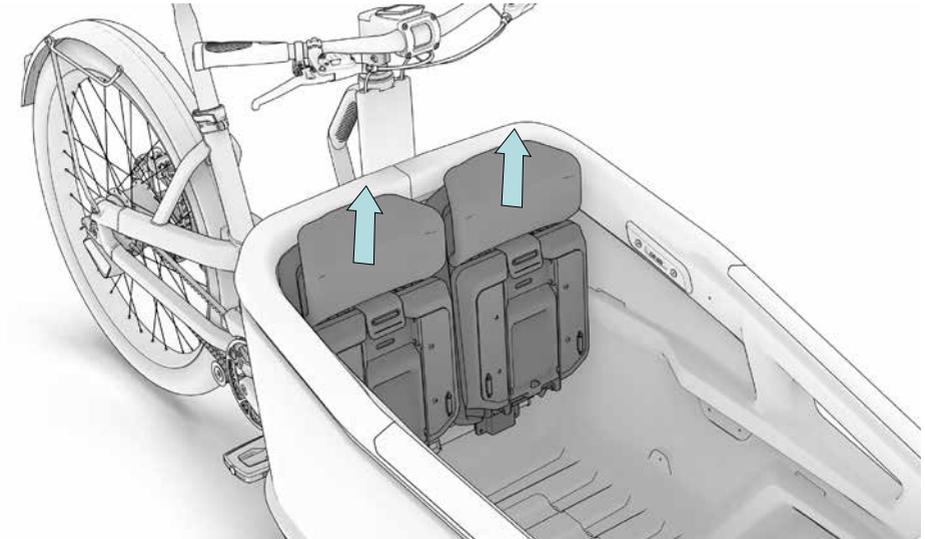


Fig. 4


If Ca Go Ergonomic-Child-Seats are already installed in the box, they have to be removed before installing the Ortho-Safety-Collar. To do this, remove the two M6 screws (5 mm Allen key) and lift out the Ergonomic-Child-Seats (Fig. 4).

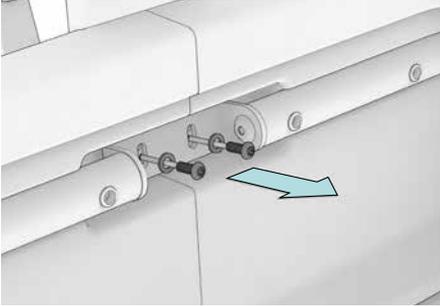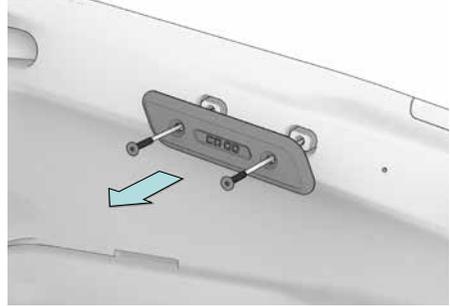

You can find more information in the assembly instructions for the Ergonomic-Child-Seat by Ca Go.

**Fig. 5****Fig. 6**

Remove the M6 screws at the transport box frame/steerer tube (5 mm Allen key) (Fig. 5) and the M6 countersunk head screws of the side plastic cover (Torx® T30) (Fig. 6).

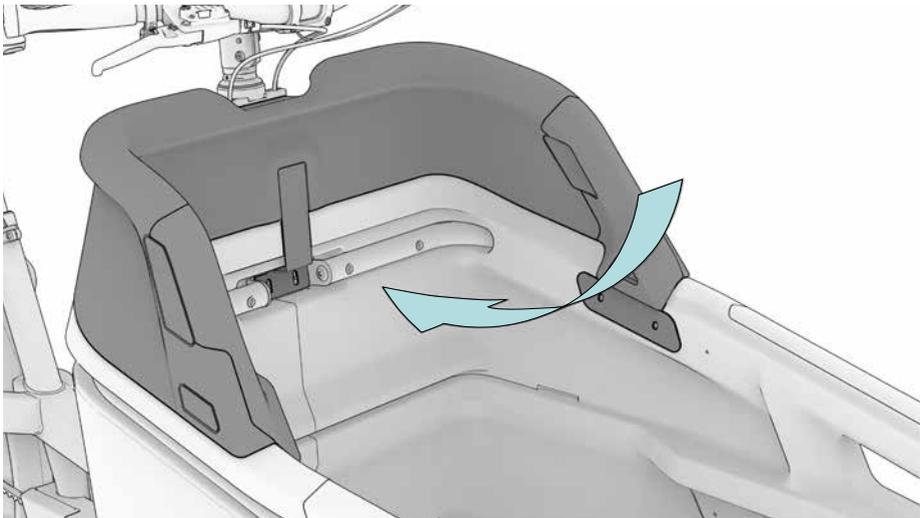**Fig. 7**

The Ortho-Safety-Collar can now be placed on the edge of the transport box. The holes of the connection plates must be positioned above the threads in the transport box (Fig. 7).

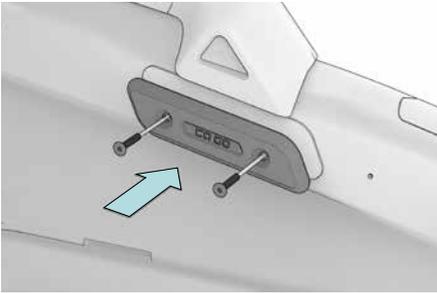


Fig. 8

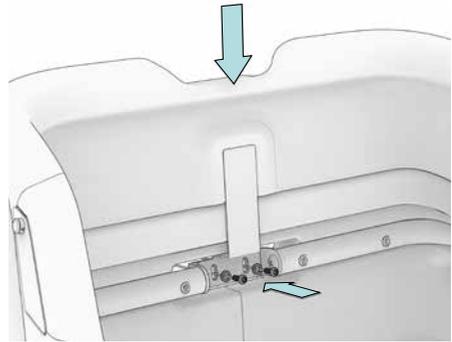


Fig. 9

Screw the side plates of the Ortho-Safety-Collar, including the plastic covers, back on using the M6 countersunk head screws, but do not fully tighten the connections yet (Fig. 8).

As the next step, the M6 screws can be screwed in. To do this, press down at the centre of the Ortho-Safety-Collar so that it sits flush on the edge of the transport box, then tighten the M6 screws to 5–8 Nm (Fig. 9). Now also tighten the side plates of the Ortho-Safety-Collar to 5–8 Nm.

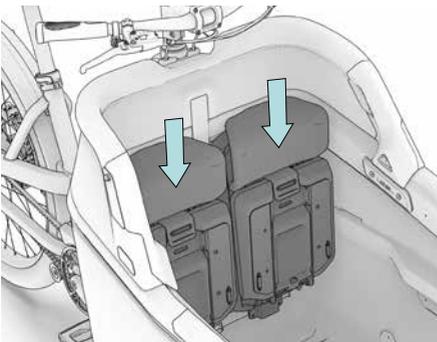


Fig. 10



You can find more information in the assembly instructions for the Ergonomic-Child-Seat by Ca Go.

Finally, the Ergonomic-Child-Seats can now be reinstalled (Fig. 10).

## General notes on care

The cleaning and care requirements for the Ortho-Safety-Collar are the same as for the transport box. In many cases, water is all that is needed to do the job. If needed, you can use a mild detergent, such as dishwashing liquid or hand soap.



Never use aggressive cleaning agents, acids or solvents to clean the set. Such substances can corrode or damage surfaces. This may affect the stability of the components.

## Statutory warranty / guarantee

The legal statutory warranty applies. You can find more details on the warranty on our website: [www.cagobike.com/en/warranty](http://www.cagobike.com/en/warranty)

Export to the USA and Canada is not permitted (product liability)!

---

## Service

If you have questions concerning this user manual, please contact your Ca Go dealer or your Ca Go service team.



**Published by:**

**Ca Go Bike GmbH**

Am Autobahnkreuz 7

56072 Koblenz

Germany

+49 261 914090-600

info@cagobike.com

www.cagobike.com

Managing directors: Franc Arnold

Company register

Court of record: District Court Koblenz / register no.: HRB 26998 / VAT Id no. DE326206636

Responsible for distribution and marketing of the user manual: Ingo Kahnt

Ca Go Bike GmbH reserves the right to change product specifications without prior notice.

Typographical errors, mistakes and modifications reserved. Version of 03/2023

©Reproduction, reprint and translation, as well as any use for economic purposes (including as extracts, in print or electronic form) without prior written approval is forbidden.